

## TASTERI SWITCH BUTTONS

	Bela White	<b>x = 0</b>
	Crna soft Soft black	<b>x = E1</b>
	Silver Silver	<b>x = S</b>
	Krem Beige	<b>x = 9</b>



### 73101.x 1M

Taster EXP 1M  
Button EXP 1M


- Taster 1M širine 22,2mm
- Taster 2M širine 44,4mm
- Za sklopke bez indikacije;
- Ugradnja na sklopku utiskivanjem
- Button 1M width 22,2mm
- Button 2M width 44,4mm
- For switches without indication;
- Installation onto the switch by pressing



### 73301.x 2M

Taster EXP 2M  
Button EXP 2M

- Taster 1M širine 22,2mm
- Taster 2M širine 44,4mm
- Za sklopke sa indikacijom
- Ugradnja na sklopku utiskivanjem
- Button 1M width 22,2mm
- Button 2M width 44,4mm
- For switches with indication
- Installation onto the switch by pressing

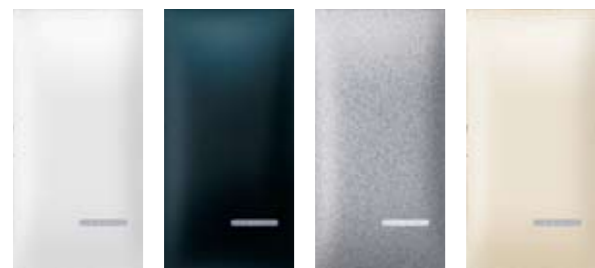

### 73201.x 1M

Taster sa indikacijom  
EXP 1M  
Button with indicator  
EXP 1M



### 73401.x 2M

Taster sa indikacijom  
EXP 2M  
Button with indicator  
EXP 2M

- Za pokrivanje mesta gde nedostaje modul
- Pokriva širinu jednog modula 22,2mm
- Ugradnja u noseću prirubnicu utiskivanjem
- For covering the places where module is missing
- Covers the width of one module 22,2mm
- Installation into the holding frame by pressing



### 70001.x

Poklopac maske  
(slepi modul)  
EXP 1M  
Blank module  
EXP 1M

## TASTERI SA UGRAVIRANIM SIMBOLIMA SWITCH BUTTONS ENGRAVED WITH THE SYMBOLS



EXP 1M	73104.x	73105.x	73106.x	73107.x	73102.x	73102.x	
EXP 2M	73304.x	73305.x	73306.x	73307.x	73302.x	73303.x	
sa oznakom with symbol	pojačavanja amplification	ključa key	0-I 0-I	posluge servants	strelica gore arrow up	strelica dole arrow down	
• Taster 1M širine 22,2mm.							<b>x = 0</b> Bela White
• Taster 2M širine 44,4mm							<b>x = E1</b> Crna soft Soft black
• Za sklopke bez indikacije;							<b>x = S</b> Silver Silver
• Ugradnja na sklopku utiskivanjem							<b>x = 9</b> Krem Beige
• Button 1M width 22,2mm.							
• Button 2M width 44,4mm							
• For switches without indication;							
• Installation onto the switch by pressing							

EXP 1M	73202.x	73203.x	73204.x	73205.x	73206.x	73207.x	73208.x	73209.x
EXP 2M	73402.x	73403.x	73404.x	73405.x	73406.x	73407.x	73408.x	73409.x
sa indikacijom i oznakom with indicator and symbol	svetla light	zvona bell	bojlera boiler	grejalice heater	ventilatora fan	priključnice socket	veš mašine washing machine	tuša shower
• Taster 1M širine 22,2mm								
• Taster 2M širine 44,4mm								
• Za sklopke sa indikacijom								
• Ugradnja na sklopku utiskivanjem								
• Button 1M width 22,2mm								
• Button 2M width 44,4mm								
• For switches with indication								
• Installation onto the switch by pressing								

- Taster se zakači na jednu stranu tipkala, a druga strana se lagano pritisne da klikne taster.
- **Napomena:**
- kod tastera sa indikacijom voditi računa o položaju indikacije (vidi sliku 1 i 2)
- stavljanje tastera je jednostavnije ukoliko se prvo zakači na podignutoj strani tipkala (kao na slici 1 i 2)
- Taster 2M poseduje nosač koji je sastavni deo tastera 2M; zajedno sa postavljanjem tastera 2M potrebno je utisnuti i nosač u prirubnicu (slika 2)
- The button is hooked to one side of switch, and the other side is lightly pressed until button is clicked
- **Note:**
- At buttons with indication pay attention of the position of indication (see picture 1 and 2)
- placing the button is easier if first snap to the raised side of the buttons (see picture 1 and 2)
- Button 2M has a carrier which is an integral part of button 2M; along with setting of button 2M it is necessary to press-in holder into the mounting frame (picture 2)

